


PC Bezel Replacement


You will need:

- A Philips screwdriver
- A flathead screwdriver
- A book or other flat item roughly 1 inch thick (such as a phone book)


1. Gently lay the PC on its side with the black circle facing up and the back of the computer toward you.
2. Remove the two screws on the back of the PC that hold the side panel on.

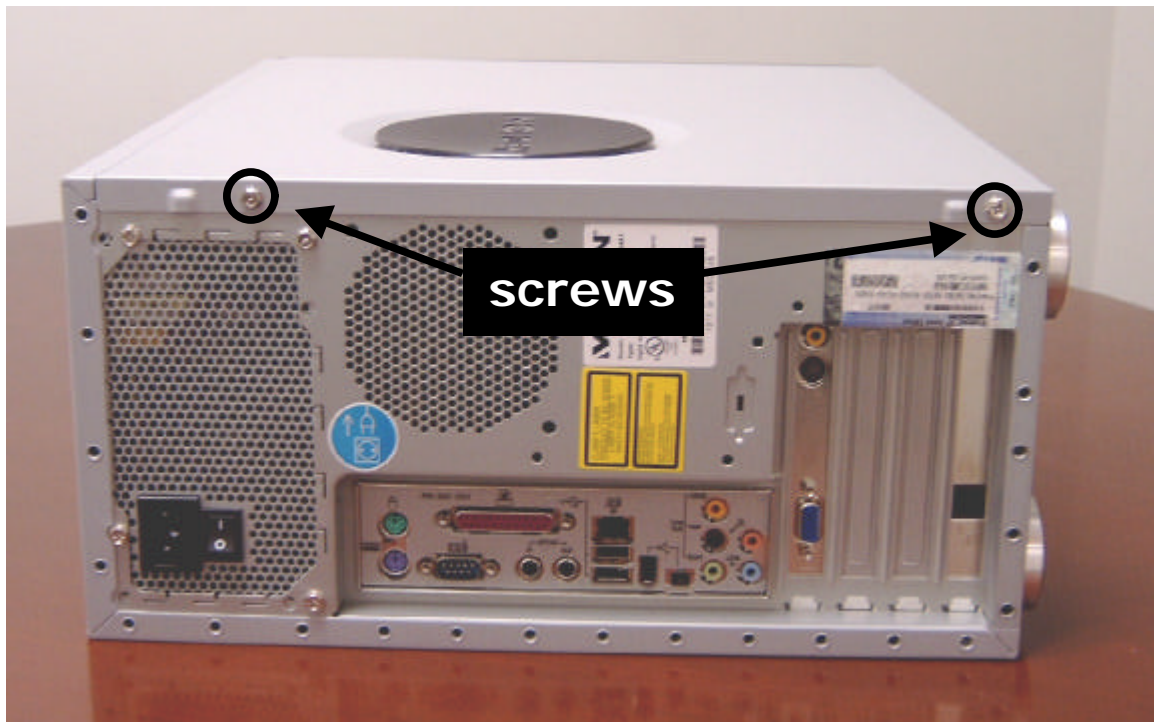


3. Remove the side panel by sliding it backward roughly 2/3" and then lifting it straight up. If the side panel does not slide backward easily, you can insert a flathead screwdriver into the indentations shown below to loosen the side panel.

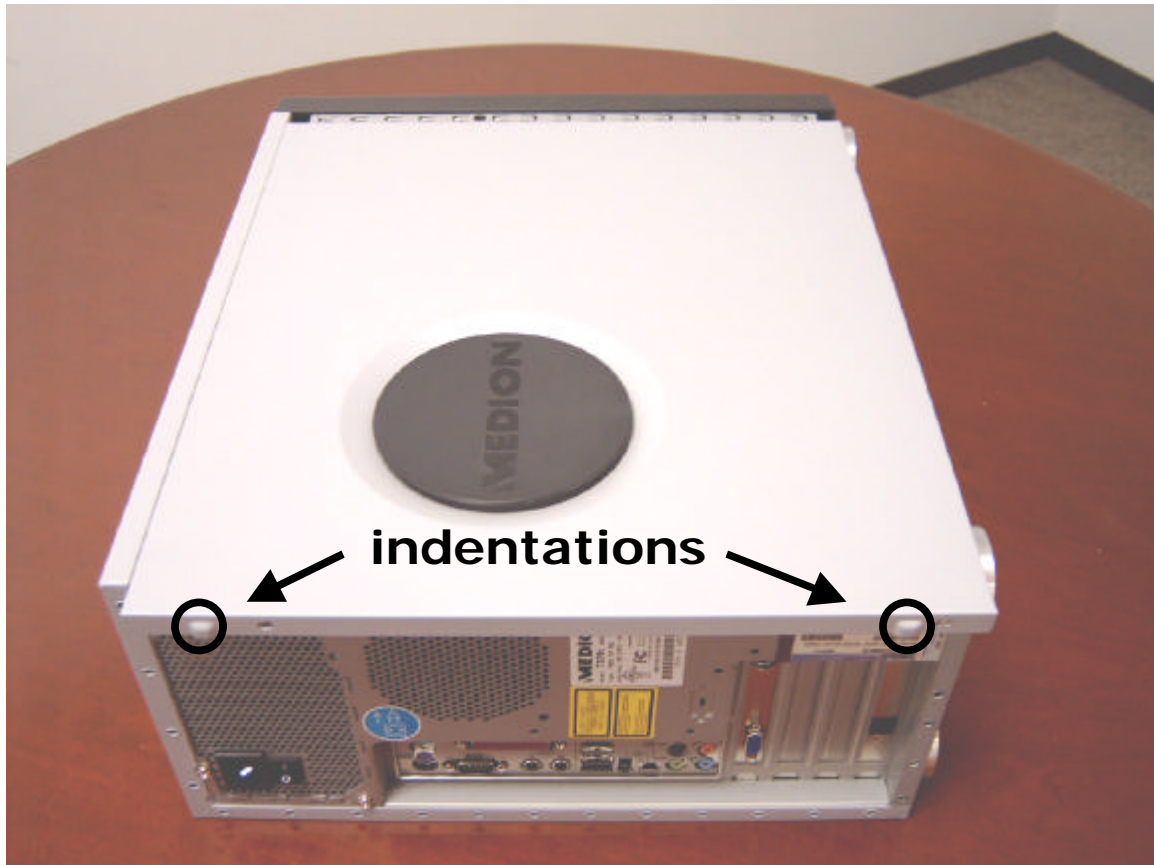


4. Place a book or other object underneath the front of the PC to lift the bezel away from the work surface.

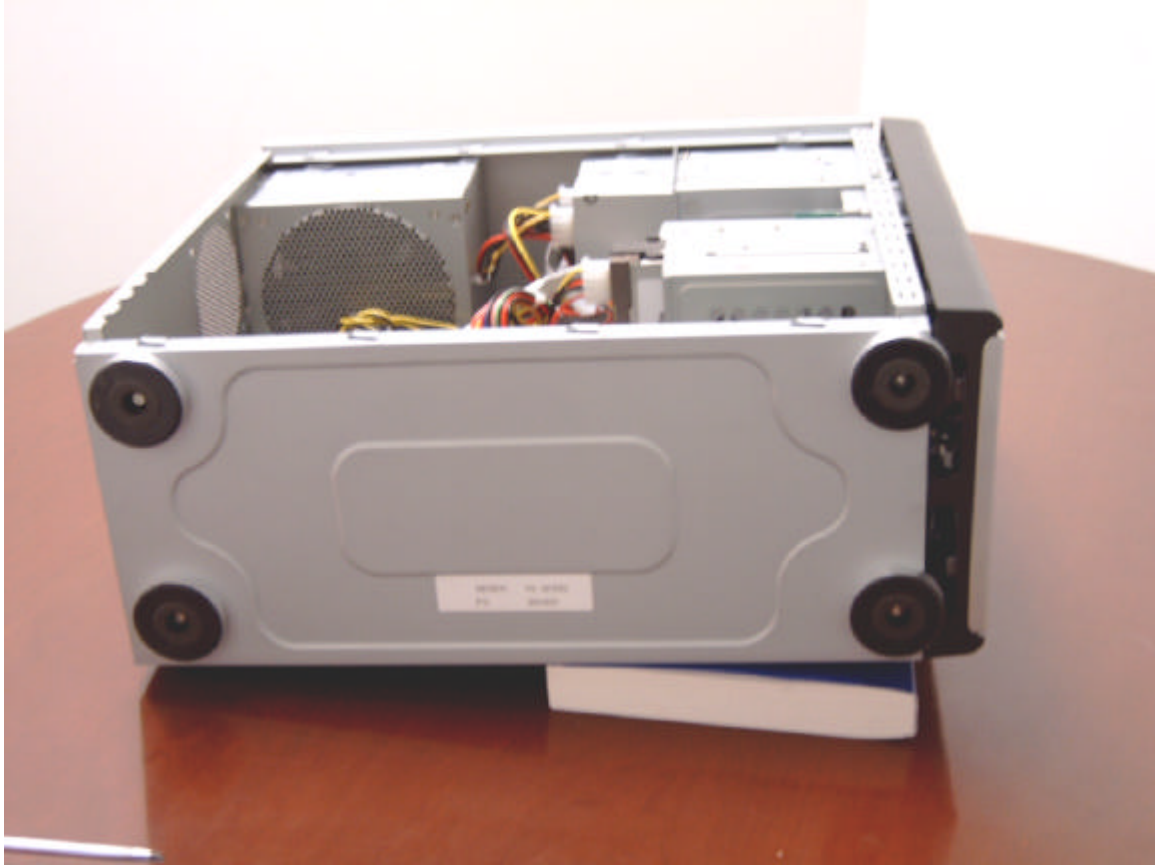

5. Loosen the latches that hold the bezel in place.

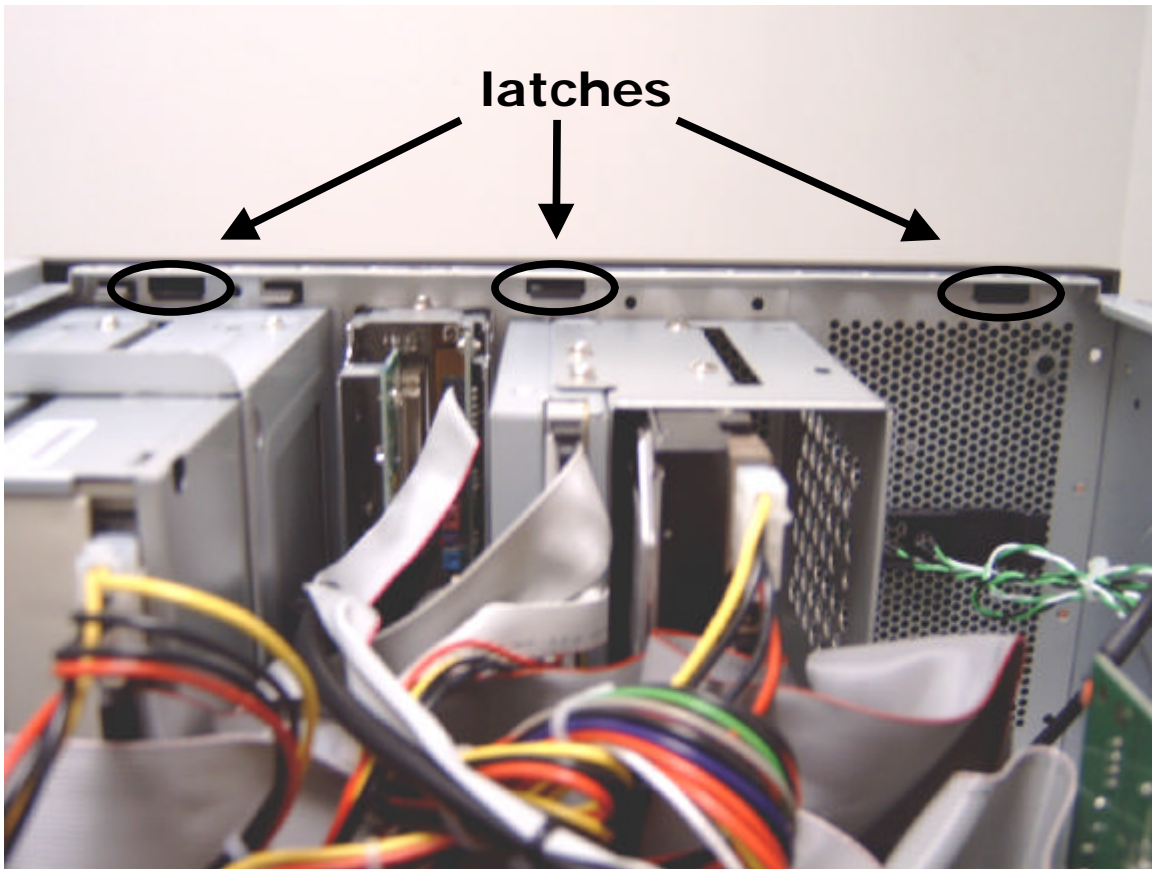

6. Swing the bezel away from the PC until you can lift the bezel out of the latches on the other side of the PC.

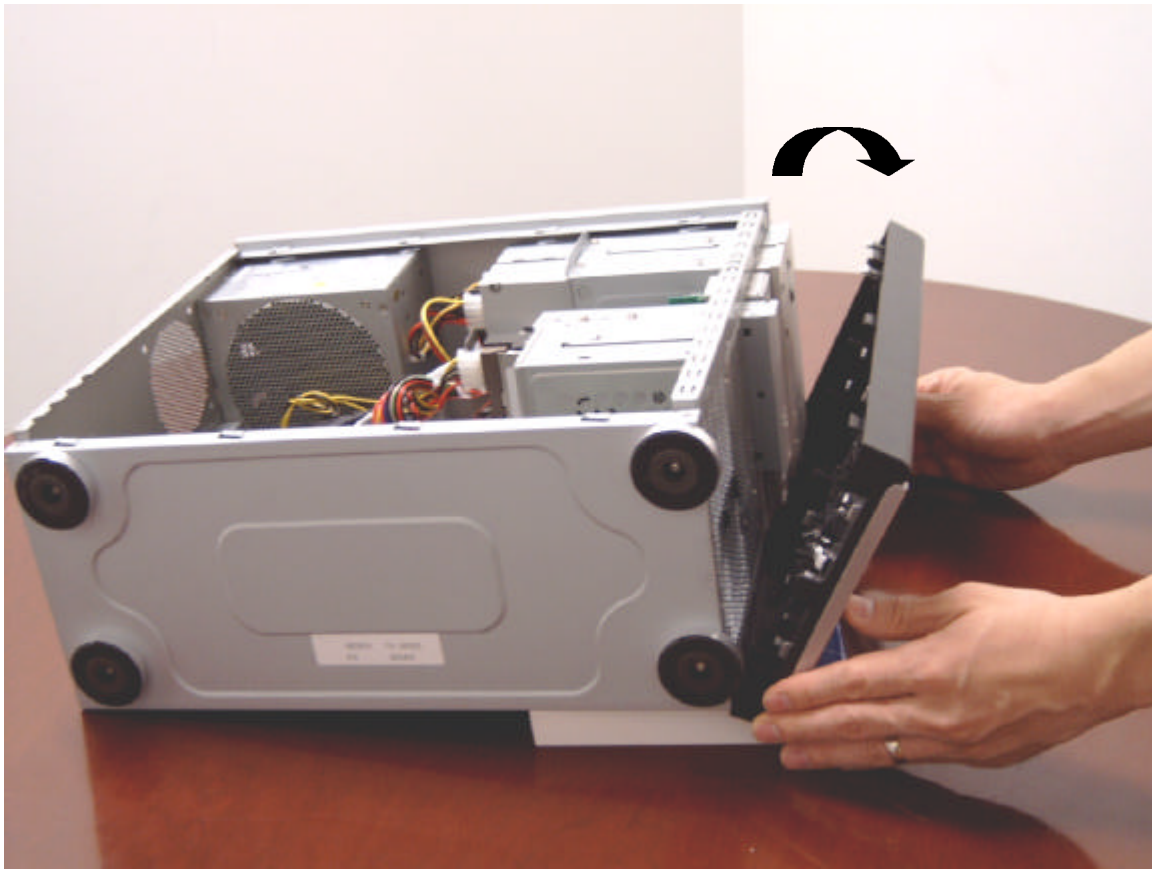

7. Installation is the reverse of removal.